


TAPERED WEIGHT

P351




INSTRUCTIONS

- Weigh car before attaching weight. Add or deduct weight per official race rules. We recommend making your car the maximum weight allowed.
- Secure Tapered Weight to bottom of car with included Screws (**Fig. 1**). **OPTION:** Countersink Weight. Place Weights on bottom of car and trace outline. Score lines 1/4" apart within the area. Chisel out the area until there is enough room for the Weight to fit. Attach with included Screws.
- To modify Tapered Weight, remove a portion of the weight along the molded-in lines with pliers (**Fig. 1**).

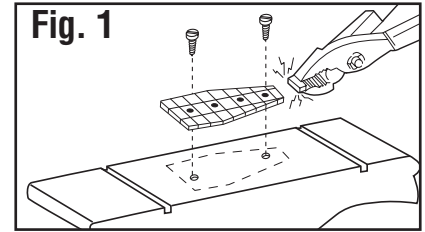

INSTRUCTIONS

- Pesez la voiture avant attache au poids. Ajoutez ou déduisez le poids par règles officielles de course. Rendez votre voiture le poids de maximum.
- Attachez Tapered Weight au fond de la voiture avec les vis (**Fig. 1**). **OPTION:** Fraiser les poids. Placer le poids sur en-dessous de la voiture et tracez. Tracer des lignes 6,35 mm de largeur dans le secteur. Découper avec un ciseau pour un ajustement plus précis.
- Pour modifier Tapered Weight, enlevez une partie du poids le long du mouler-dans des lignes à l'aide de des pinces (**Fig. 1**).

 **WARNING:** Sharp objects! Choking Hazard! Small parts. Not intended for children under 3 years. Adult supervision required.
AVERTISSEMENT : Objet pointu! Danger d'étranglement! Petites pièces. Pas recommandé pour les enfants de moins de 3 ans. Supervision d'un adulte requise.